




STRIKEFORCE
BY PALADIN™

PARTS MANUAL

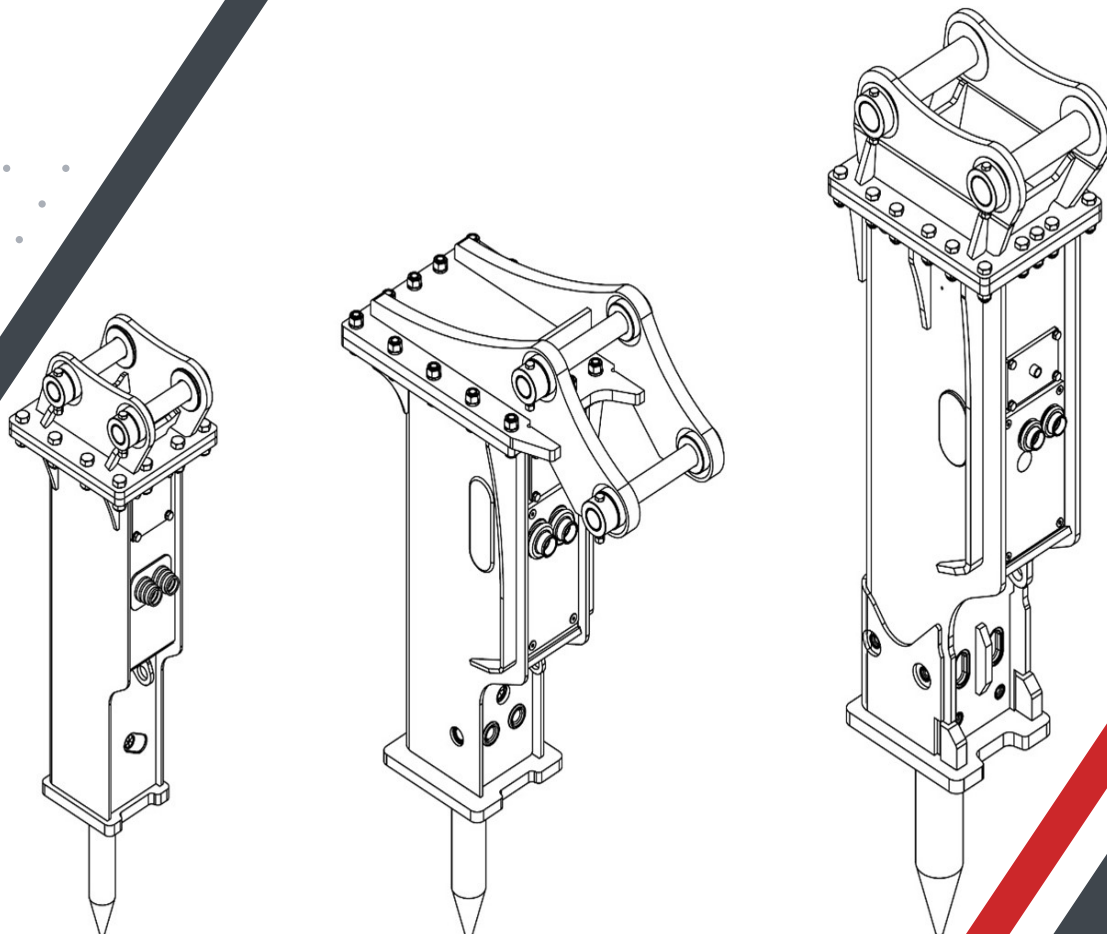

HYDRAULIC BREAKER

DX Series

D&A 6V


SERIAL NUMBER: _____

MODEL NUMBER: _____220128_____

Manual Number: 220128


Date: February 2025

Rev.

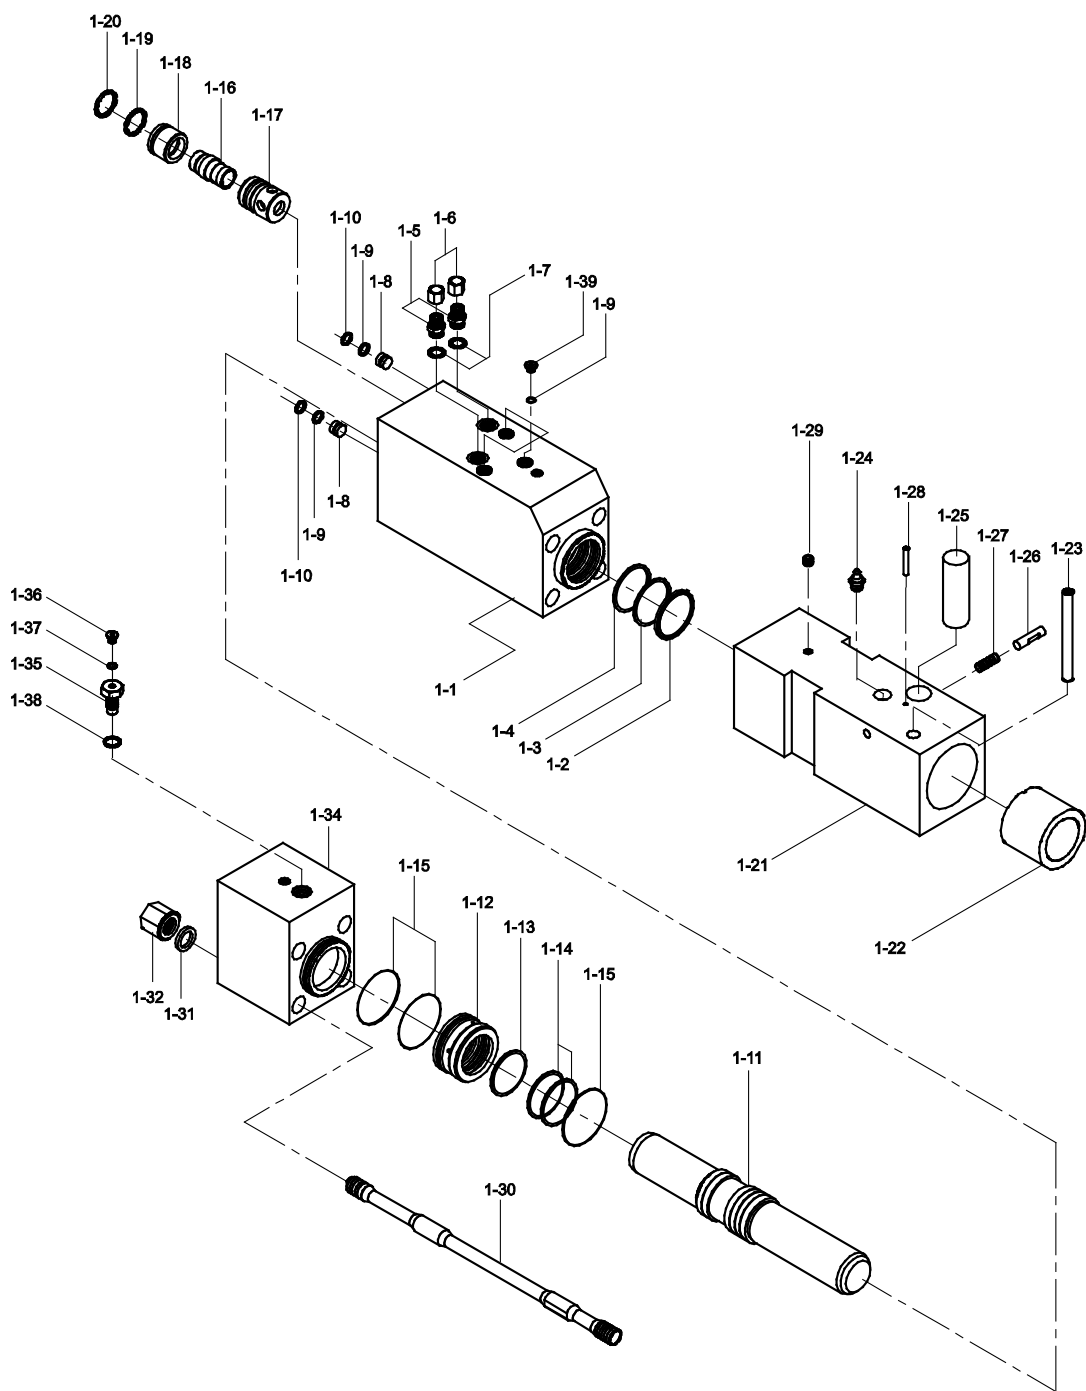


PART LIST - D&A 6V MAIN BODY (POWER CELL) ASS'Y

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
2-0	DB006V0002	MAIN BODY (POWER CELL) ASS'Y	1set(s)	
1-1	B006V-11100	CYLINDER	1	
1-2	007002-04000	DUST SEAL	1	
1-3	007004-04000	U-PACKING	1	
1-4	007006-04000	BUFFER-RING	1	
1-5	B006V-11800	HOSE ADAPTER	2	
1-6	B006V-11900	UNION CAP	2	
1-7	007001-0140P	O-RING	2	
1-8	B007V-14601	STEEL PLUG	2	
1-9	007001-0110P	O-RING	5	
1-10	007003-0110P	BACKUP-RING	2	
1-11	B006V-11201	PISTON	1	
1-12	B006V-11300	CYLINDER BUSH	1	
1-13	007005-03800	GAS SEAL	1	
1-14	007007-03800	STEP SEAL	2	
1-15	007001-0550G	O-RING	3	
—	B008-11456	VALVE SET	1set(s)	16,17,18,19,20
1-16	B008-11400	VALVE	1	
1-17	B008-11500	VALVE BUSH	1	
1-18	B008-11600	VALVE CAP	1	
1-19	007001-0350G	O-RING	1	
1-20	007001-0220A	O-RING	1	
1-21	B006V-12100	FRONT HEAD	1	
1-22	B007V-12301	LOWER BUSH	1	
1-23	B006V-12650	SPRING PIN	1	
1-24	004013-10800	GREASE NIPPLE	1	
1-25	B007V-12600	CHISEL PIN (TOOL PIN)	1	
1-26	B006V-12610	CHISEL STOPPER PIN (TOOL STOPPER PIN)	1	
1-27	B008-12630	SPRING	1	
1-28	004045-05025	SPRING PIN	1	
1-29	004014-10400	HOLLOW PLUG	1	
—	B006V-12200	THROUGH BOLT SET	4set(s)	30,31,32
1-30	B006V-12210	THROUGH BOLT	4	
1-31	B006V-12220	THROUGH BOLT WASHER	4	
1-32	B006V-12230	THROUGH BOLT TOP NUT	4	
1-34	B006V-13100	BACK HEAD	1	
—	B008-13200	GAS VALVE SET	1set(s)	35,36,37,38
1-35	B008-13210	GAS VALVE	1	
1-36	B008-13220	GAS VALVE CAP	1	
1-37	007001-0080P	O-RING	1	
1-38	007001-0180P	O-RING	1	
1-39	004012-10400	RO PLUG	3	
—	B006V-SK001	SEAL KIT	1set(s)	

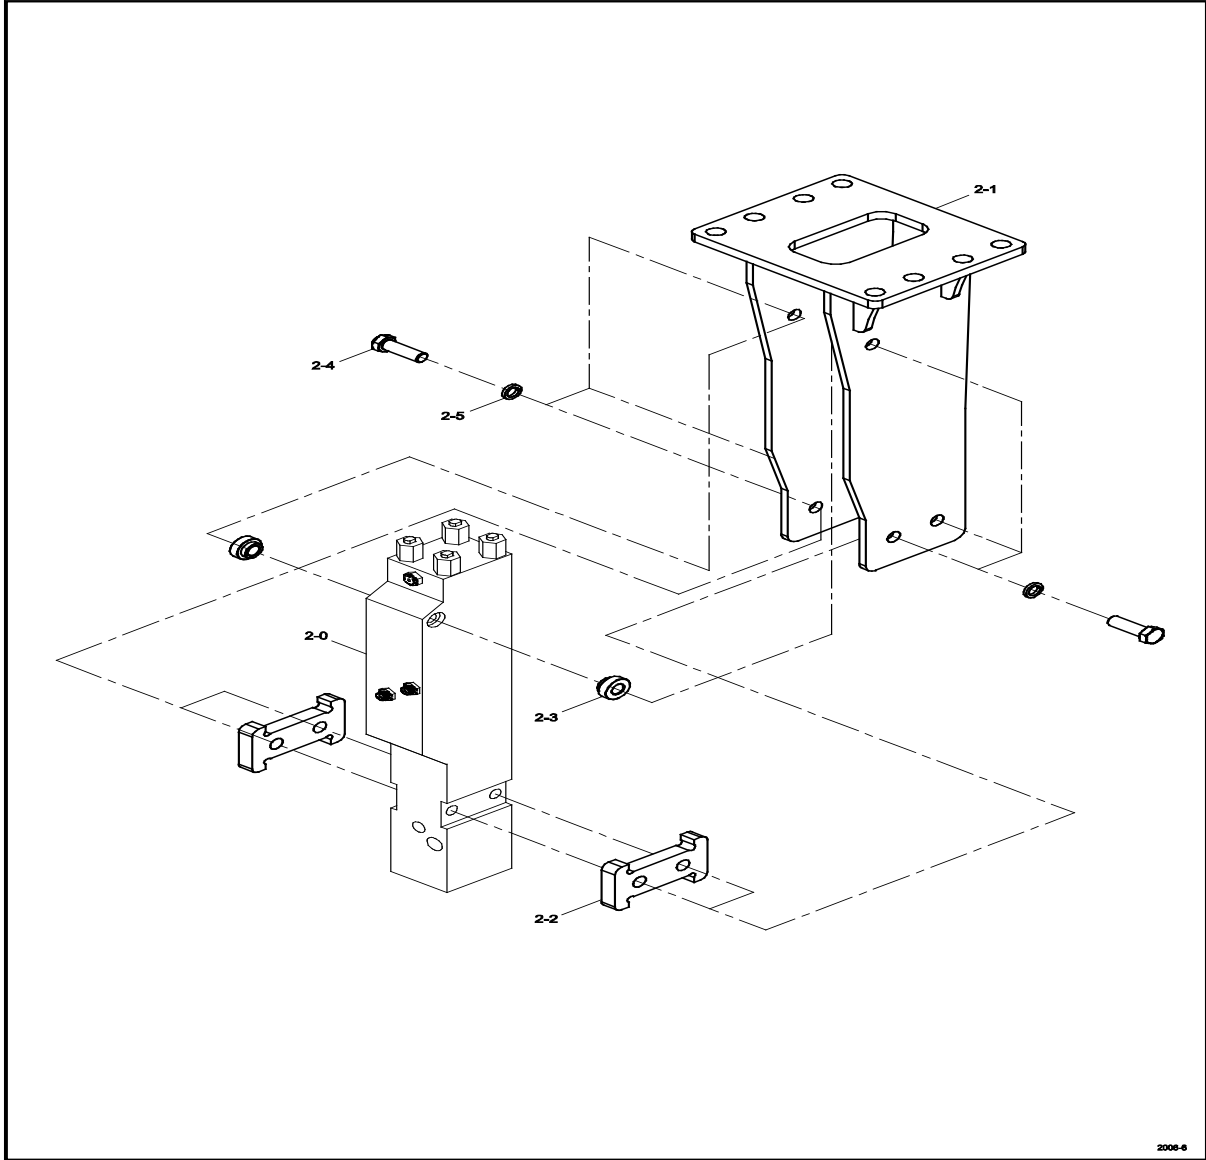


PART LIST - D&A 6V TOP HOUSING ASS'Y

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
2	DB006V2101	TOP HOUSING ASS'Y	1set(s)	
2-1	B006V-40000	TOP HOUSING	1	
2-2	B006V-40100	BOTTOM HOLDER	2	
2-3	B007V-40200	UPPER HOLDER	2	
2-4	002001-16050	HEX BOLT	6	
2-5	0020H8-16000	SPRING WASHER	6	

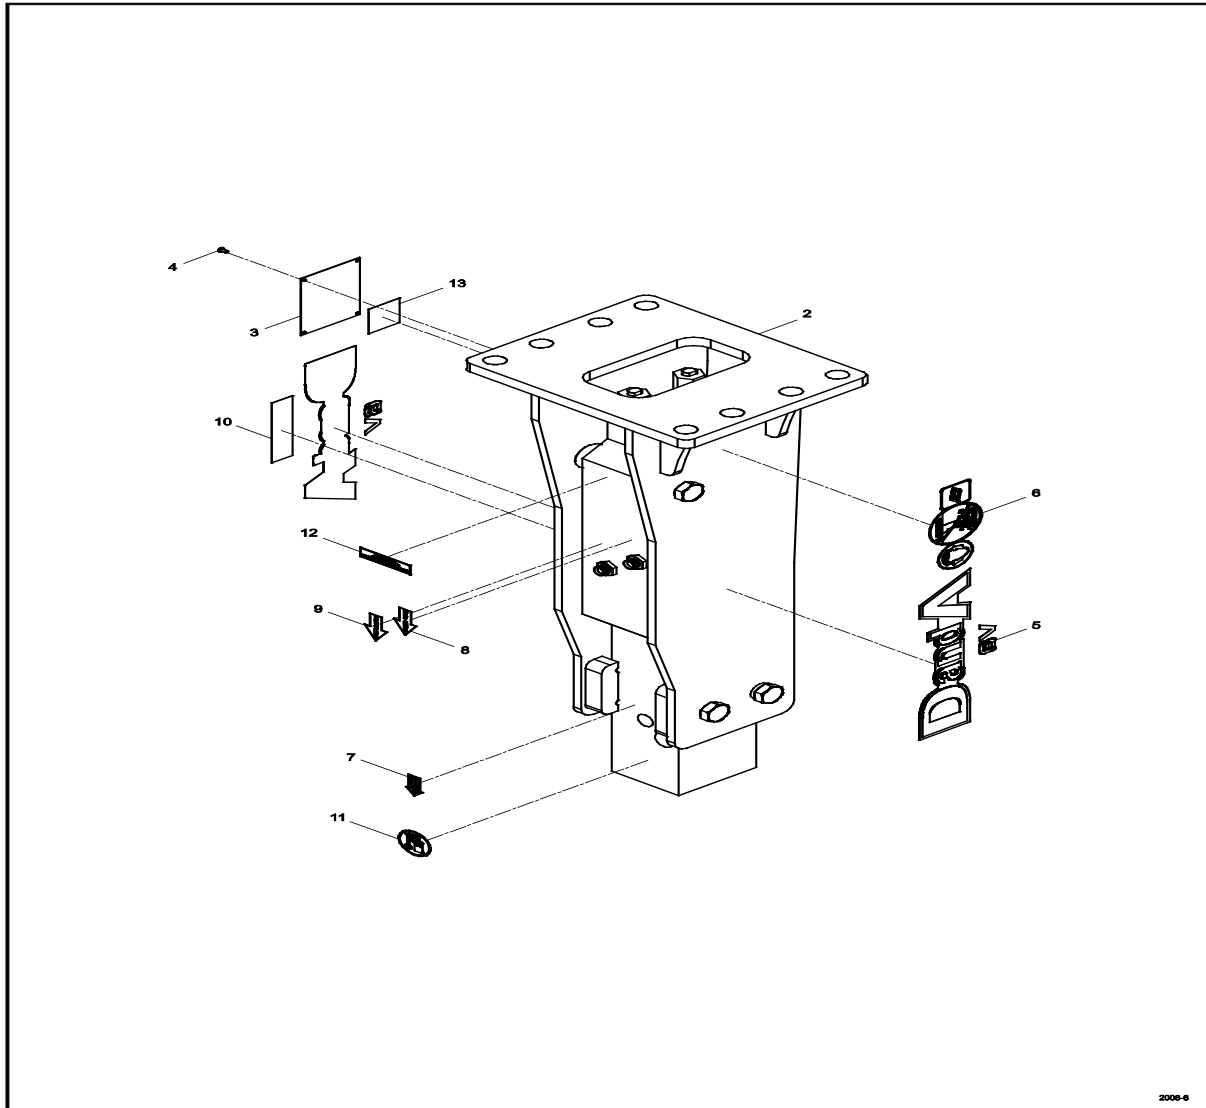


PART LIST - D&A 6V STICKER/NAME PLATE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
3	DandA-NAME-10	NAME PLATE	1	
4	004054-03060	RIVET	4	
5	B006V-DSN250	NAME DECAL	2	
6	B008V-DSS00-03	STICKER-DANGER	1	
7	B008V-DSS71	STICKER-GREASE	1	
8	B008V-DSS310	STICKER-OUT PORT	1	
9	B008V-DSS320	STICKER-IN PORT	1	
10	B063V-DSS00-11	STICKER-WARNING (GAS14)	1	
11	B63V-DSS00-06	STICKER-HOT CAUTION	1	
12	B008V-DSS090	STICKER-HIGH PRESSURE GAS CAUTION	1	
13	NOISE-11500	STICKER-NOISE	1	

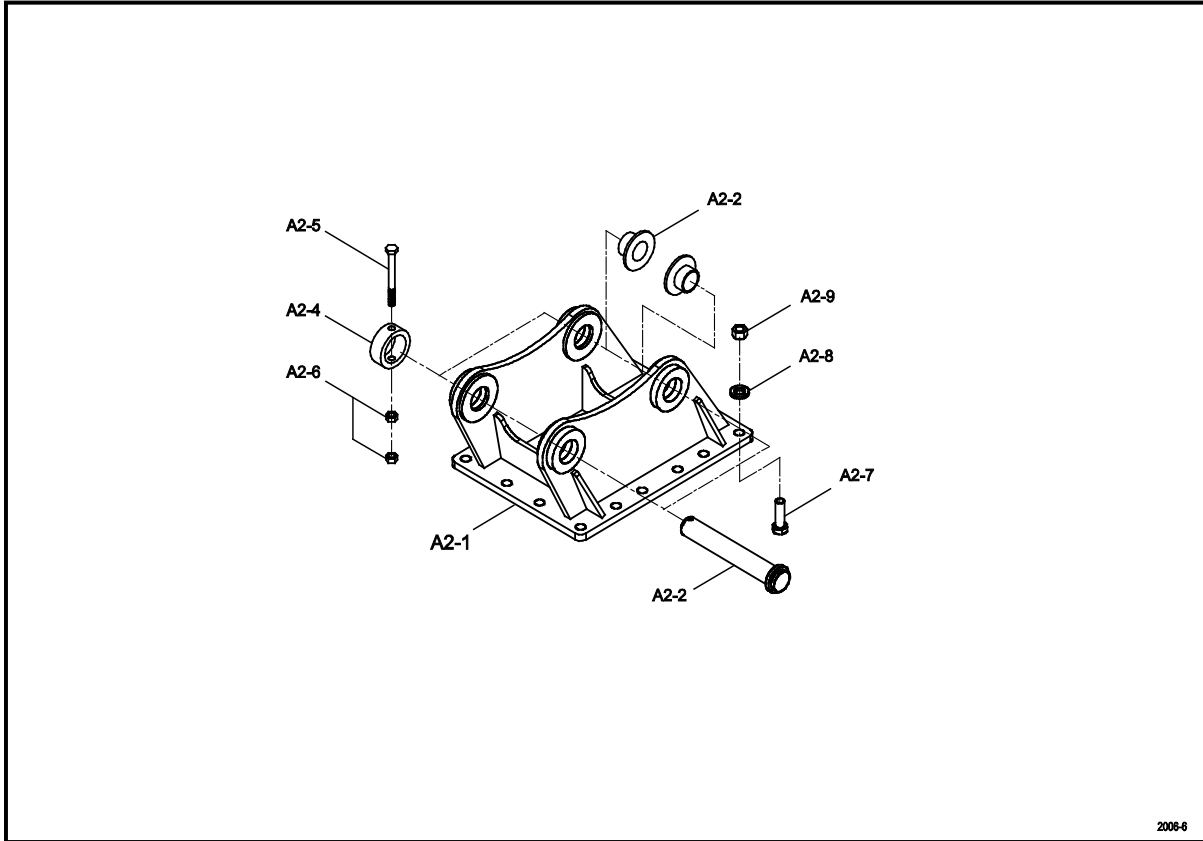


PART LIST - D&A 6V MOUNT CAP

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
A2		MOUNT CAP ASS'Y	1set(s)	TAILOR MADE AS PER ORDER
A2-1		MOUNT CAP	1	TAILOR MADE AS PER ORDER
A2-2		BRACKET PIN	2	TAILOR MADE AS PER ORDER
A2-3		BRACKET PIN BUSH	4	TAILOR MADE AS PER ORDER
A2-4		STOP RING	2	TAILOR MADE AS PER ORDER
A2-5		HEX BOLT	2	TAILOR MADE AS PER ORDER
A2-6		HEX NUT	4	TAILOR MADE AS PER ORDER
A2-7	002A01-18055	HEX BOLT	12	
A2-8	002AH8-18000	SPRING WASHER	12	
A2-9	002A11-1800N	NYLON NUT	12	

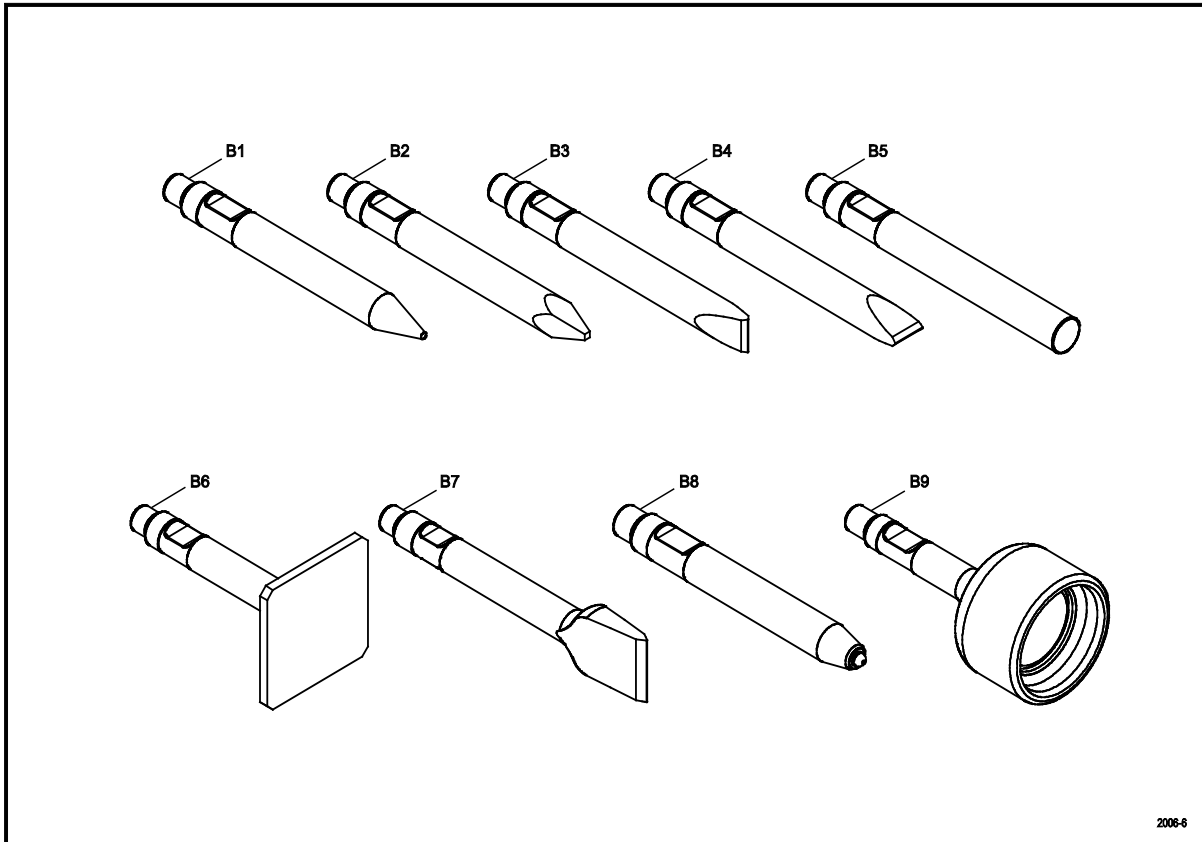


PART LIST - D&A 6V CHISEL (TOOL)

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
B1	B006V-12500	CONICAL POINT (CONICAL MOIL POINT)		
B2	B006V-12510	MOIL POINT (PYRAMID MOIL POINT)		
B3	B006V-12520	CROSS CUT (CHISEL POINT H)		
B4	B006V-12530	IN-LINE (CHISEL POINT V)		
B5	B006V-12540	FLAT END (BLUNT)		
B6		TAMPING PAD (TAMPING TOOL)		TAILOR MADE AS PER ORDER
B7	B006V-12560	ASPHALT CUTTER		
B8		CORE CONICAL POINT (CORE MOIL POINT)		TAILOR MADE AS PER ORDER
B9		ELEPHANT FOOT TOOL (POST DRIVER)		TAILOR MADE AS PER ORDER

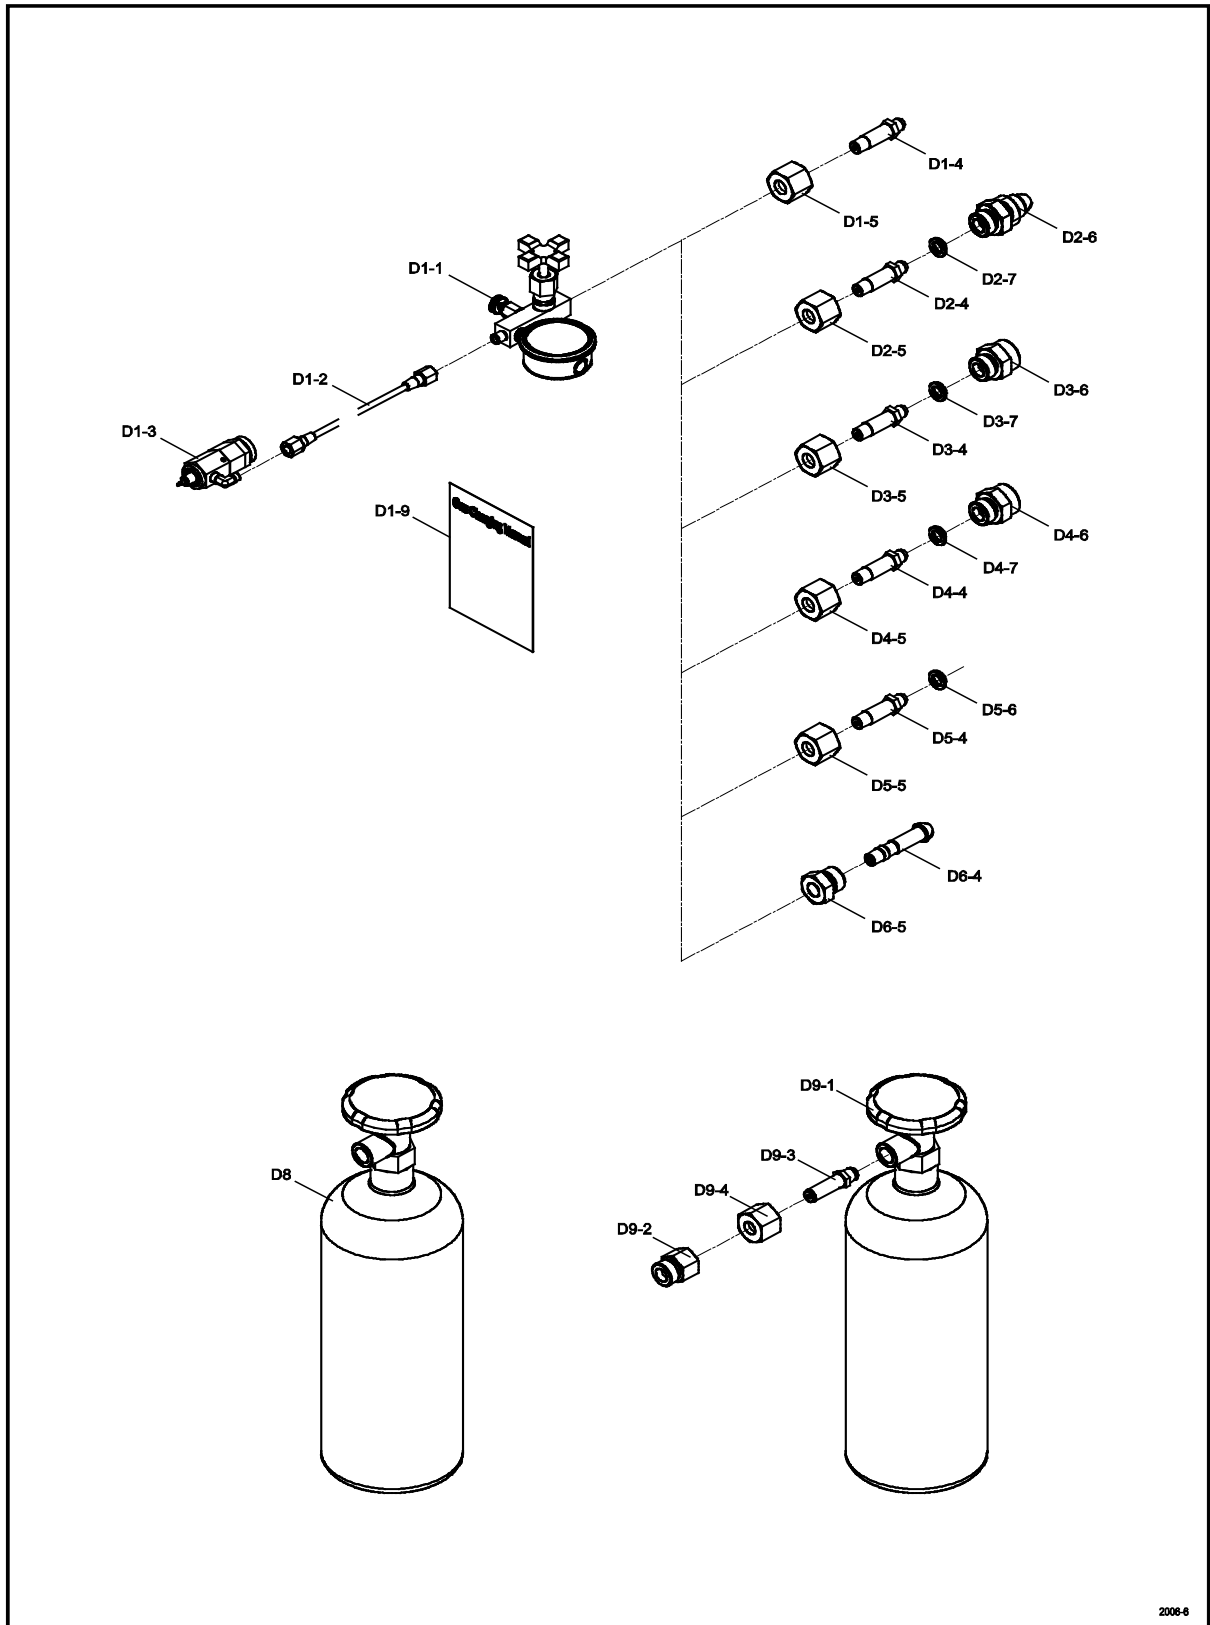


PART LIST - D&A 6V GAS CHARGING

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
D1	BGK01-N2DS1	GAS CHARGING KIT - STANDARD	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D1-4	BGK00-N2430	COUPLING	1	
D1-5	BGK00-N2420	CAP NUT	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D2	BGK01-N2VI1	GAS CHARGING KIT - INDIA	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D2-4	BGK00-N34F0	COUPLING	1	
D2-5	BGK00-N3420	CAP NUT	1	
D2-6	BGK00-N3490	GAS CYLINDER ADAPTER	1	
D2-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D3	BGK01-N2VC1	GAS CHARGING KIT - CHINA	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D3-4	BGK00-N34F0	COUPLING	1	
D3-5	BGK00-N3420	CAP NUT	1	
D3-6	BGK00-N34C0	GAS CYLINDER ADAPTER	1	
D3-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D4	BGK01-N2BM1	GAS CHARGING KIT - BRAZIL	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D4-4	BGK00-N34F0	COUPLING	1	
D4-5	BGK00-N3420	CAP NUT	1	
D4-6	BGK00-N34B0	GAS CYLINDER ADAPTER	1	
D4-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D5	BGK01-N2GE1	GAS CHARGING KIT - GERMANY	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D5-4	BGK00-N34F0	COUPLING	1	
D5-5	BGK00-N3420	CAP NUT	1	
D5-6	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D6	BGK01-N2A01	GAS CHARGING KIT - NORTH AMERICA	1set(s)	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D6-4	BGK00-NALL0	COUPLING	1	
D6-5	BGK00-NCAL1	CAP NUT	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D8	BGK00-B0300L	GAS CYLINDER - STANDARD	1	
D9	BGK01-B0300LS	GAS CYLINDER- INDIA	1set(s)	
D9-1	BGK00-B0300L	GAS CYLINDER - STANDARD	1	
D9-2	BGK00-N3500	GAS CYLINDER ADAPTER	1	
D9-3	BGK00-N3510	COUPLING	1	
D9-4	BGK00-N3520	CAP NUT	1	

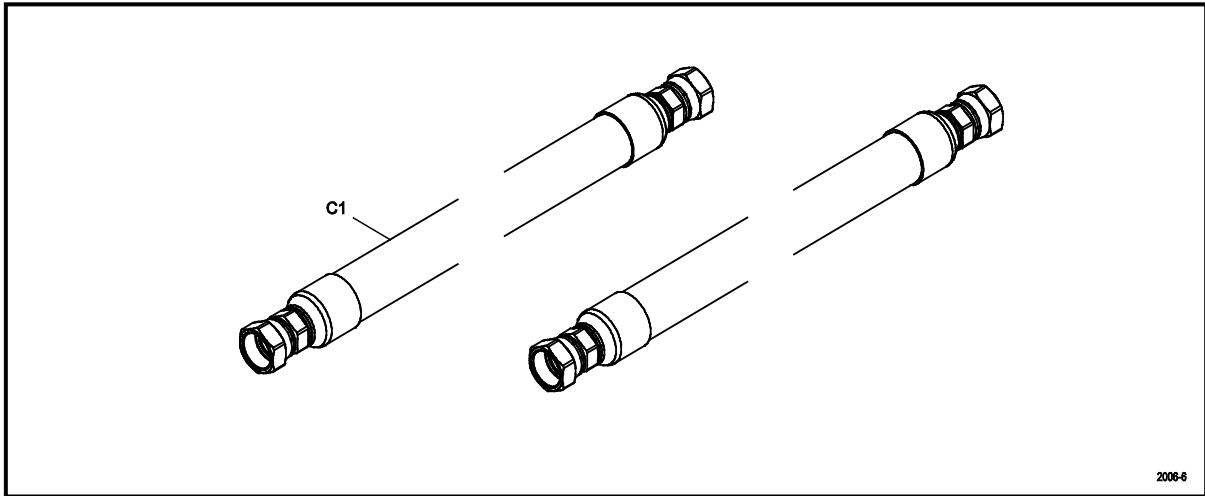


PART LIST - D&A 6V HYD HOSE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
C1	F2A734411200	HYD HOSE	2	

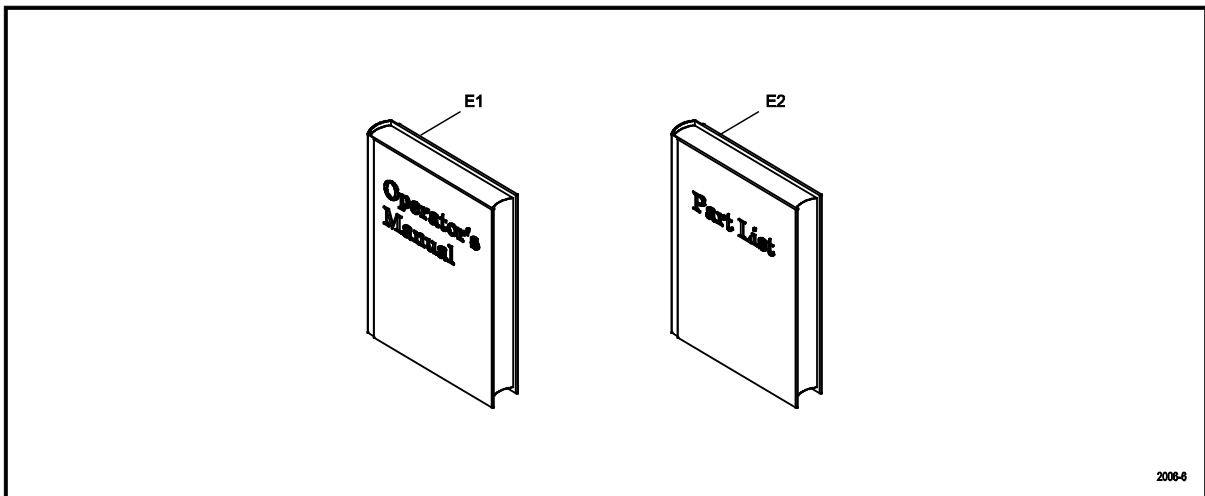

PART LIST - D&A 6V LITERATURE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
E1	DBOM100	OPERATOR'S MANUAL	1	
E2	DBPM100-006V	PART LIST	1	

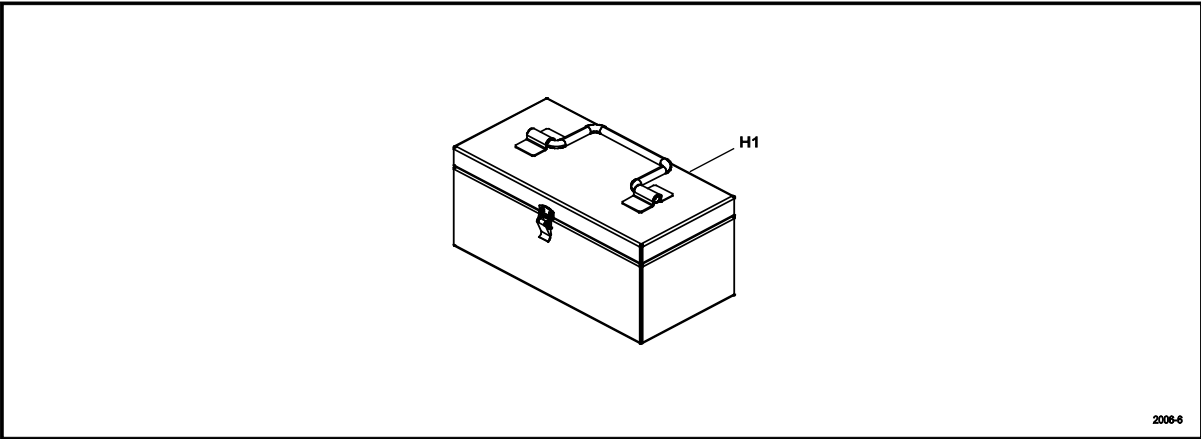

PART LIST - D&A 6V TOOL BOX

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
H1	B006V-TB001	TOOL BOX	1	



STRIKE*  *FORCE TM
BY PALADIN