




STRIKEFORCE
BY PALADIN™

PARTS MANUAL

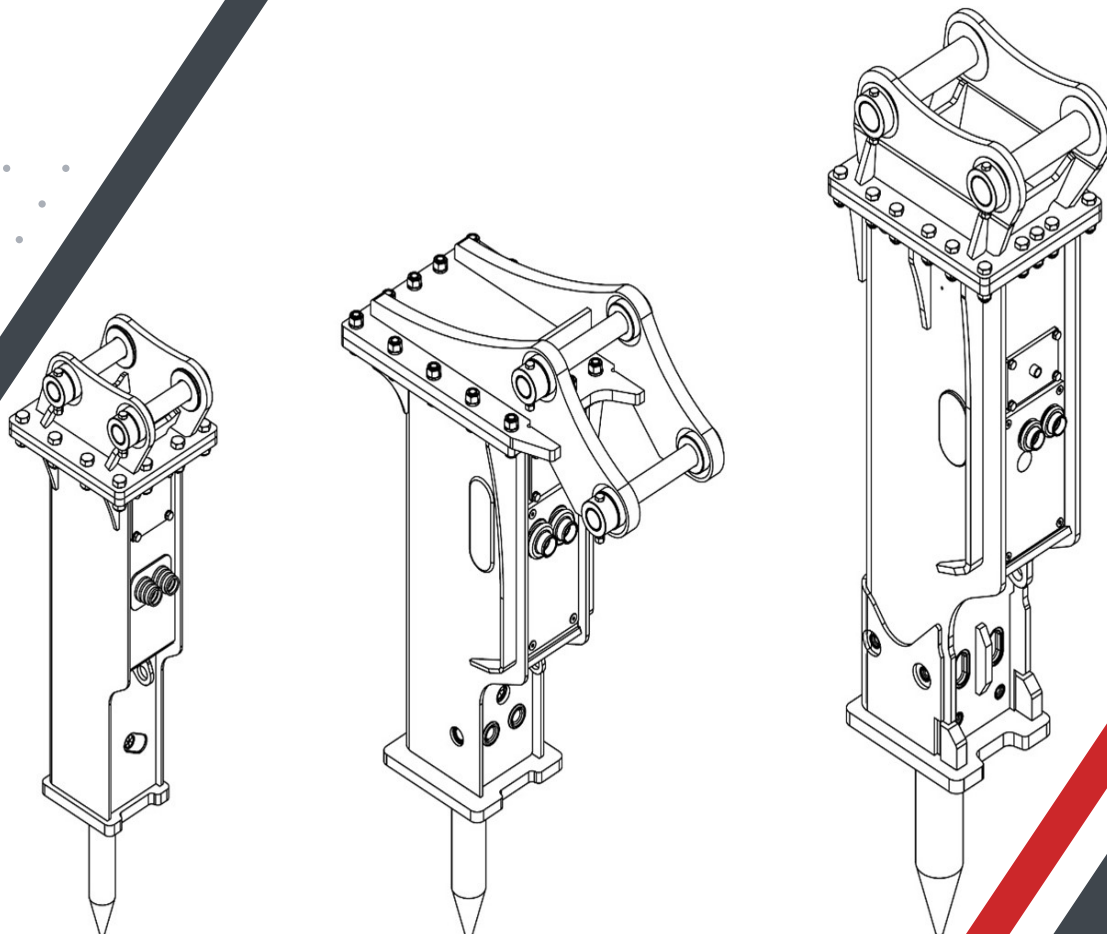

HYDRAULIC BREAKER

DX Series
D&A 70DX(75V)

SERIAL NUMBER: _____

MODEL NUMBER: _____220128_____


Manual Number: 220128

Date: February 2025

Rev.

PART LIST - D&A 60V MAIN BODY (POWER CELL) ASS'Y


NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
2-0	DB065V0000	MAIN BODY (POWER CELL) ASS'Y	#####	
1-1	B061V-111A2	CYLINDER	1	
1-2	007002-07000	DUST SEAL	1	
1-3	007004-07000	U-PACKING	1	
1-4	B062V-11800	HOSE ADAPTER	2	
1-5	B070-11900	UNION CAP	2	
1-6	007001-0180P	O-RING	5	
1-7	004012-10200	RO PLUG	2	
1-9	007001-0140P	O-RING	1	
1-10	004012-10400	RO PLUG	6	
1-11	007001-0110P	O-RING	6	
1-12	B061V-11200	PISTON	1	
1-13	B050-11300	CYLINDER BUSH	1	
1-14	007005-06800	GAS SEAL	1	
1-15	007007-06800	STEP SEAL	2	
1-16	007001-0900G	O-RING	3	
—	B061V-11456	VALVE SET	#####	17,18,19,20,21
1-17	B061V-11400	VALVE	1	
1-18	B061V-11500	VALVE BUSH	1	
1-19	B061V-11601	VALVE CAP	1	
1-20	007001-0450G	O-RING	1	
1-21	007001-0200P	O-RING	1	
1-26	B062V-12102	FRONT HEAD	1	
1-27	B062V-12400	UPPER BUSH	1	
1-28	B062V-12302	LOWER BUSH	1	
1-29	B030-12650	STOPPER PIN	2	
1-30	B030-12620	RUBBER PLUG	3	
1-31	004013-10400	GREASE NIPPLE	1	
1-32	B062V-12600	CHISEL PIN (TOOL PIN)	2	
1-33	B062V-12670	STOPPER PIN	1	
1-36	B050-12111	AIR PLUG	1	
—	B050-12200	THROUGH BOLT SET	#####	37,38,39
1-37	B050-12210	THROUGH BOLT	4	
1-38	B050-12220	THROUGH BOLT WASHER	4	
1-39	B050-12230	THROUGH BOLT TOP NUT	4	
1-41	B052V-13100	BACK HEAD	1	
—	B008-13200	GAS VALVE SET	#####	6,42,43,44
1-42	B008-13210	GAS VALVE	1	
1-43	B008-13220	GAS VALVE CAP	1	
1-44	007001-0080P	O-RING	1	
—	B061V-SK001	SEAL KIT	#####	

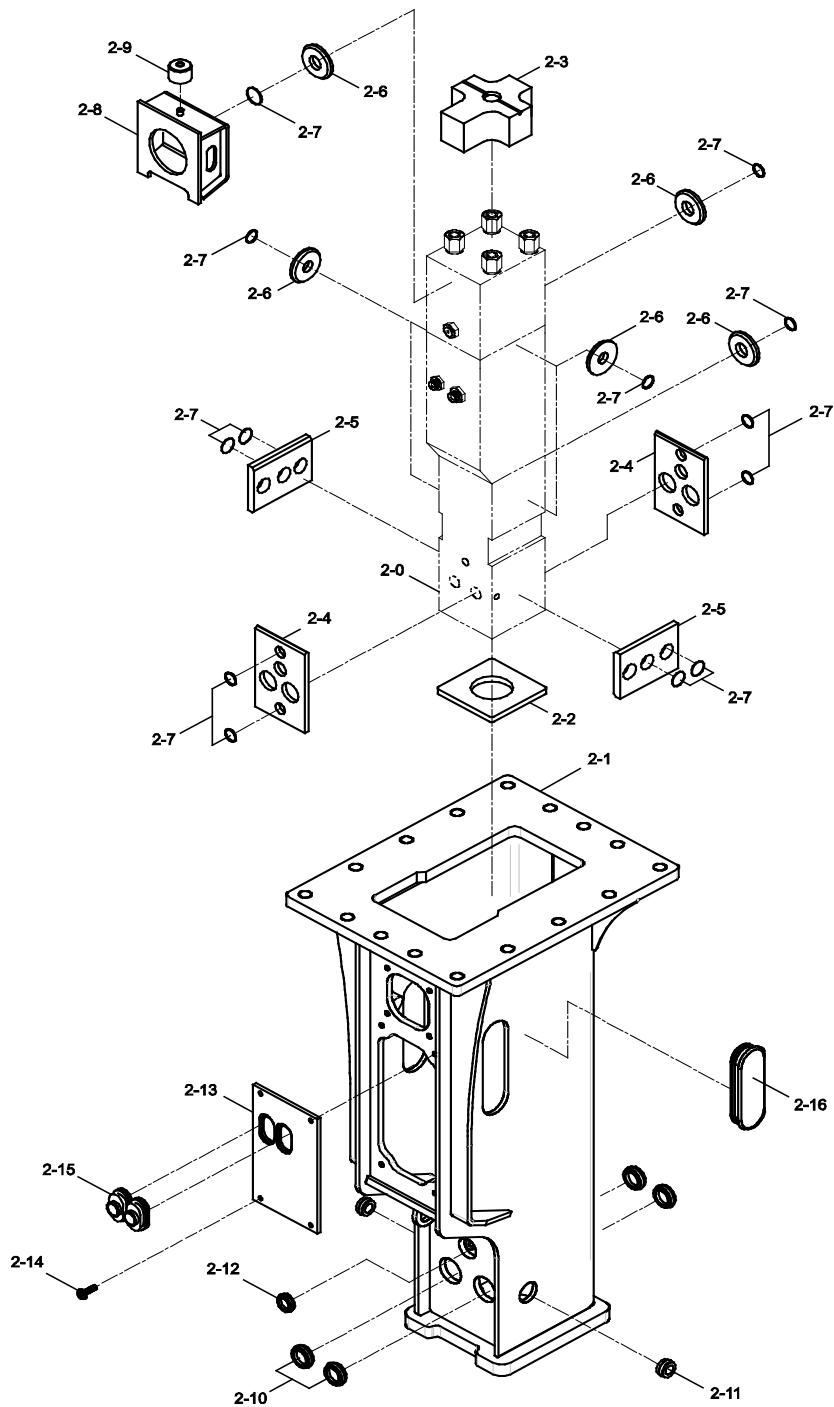

2003-60


PART LIST - D&A 60V BOX HOUSING ASS'Y

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
2	B065F-55000	BOX HOUSING ASS'Y	#####	
2-1	B062F-55010	BOX HOUSING	1	
2-2	B030V-35100	BOTTOM DAMPER	1	
2-3	B050V-35200	UPPER DAMPER	1	
2-4	B062V-27139	MC PAD (SHELL PAD)	2	
2-5	B062V-27229	MC PAD (SHELL PAD)	2	
2-6	B050V-2721A	MC PAD (SHELL PAD)	7	
2-7	007001-0340P	O-RING	15	
2-8	B062F-55190	HEAD PLATE	1	
2-9	B070V-27110	HEAD DAMPER	1	
2-10	B030V-12800	RUBBER COVER	4	
2-11	B015V-12800	RUBBER COVER	2	
2-12	B015V-128GG	RUBBER COVER	1	
2-13	B062F-37600	MC COVER	1	
2-14	002A05-10025	FLAT HEAD SOCKET BOLT	4	
2-15	B070V-27034	HOSE COVER	2	
2-16	B082F-37800	SIDE HOSE COVER	2	

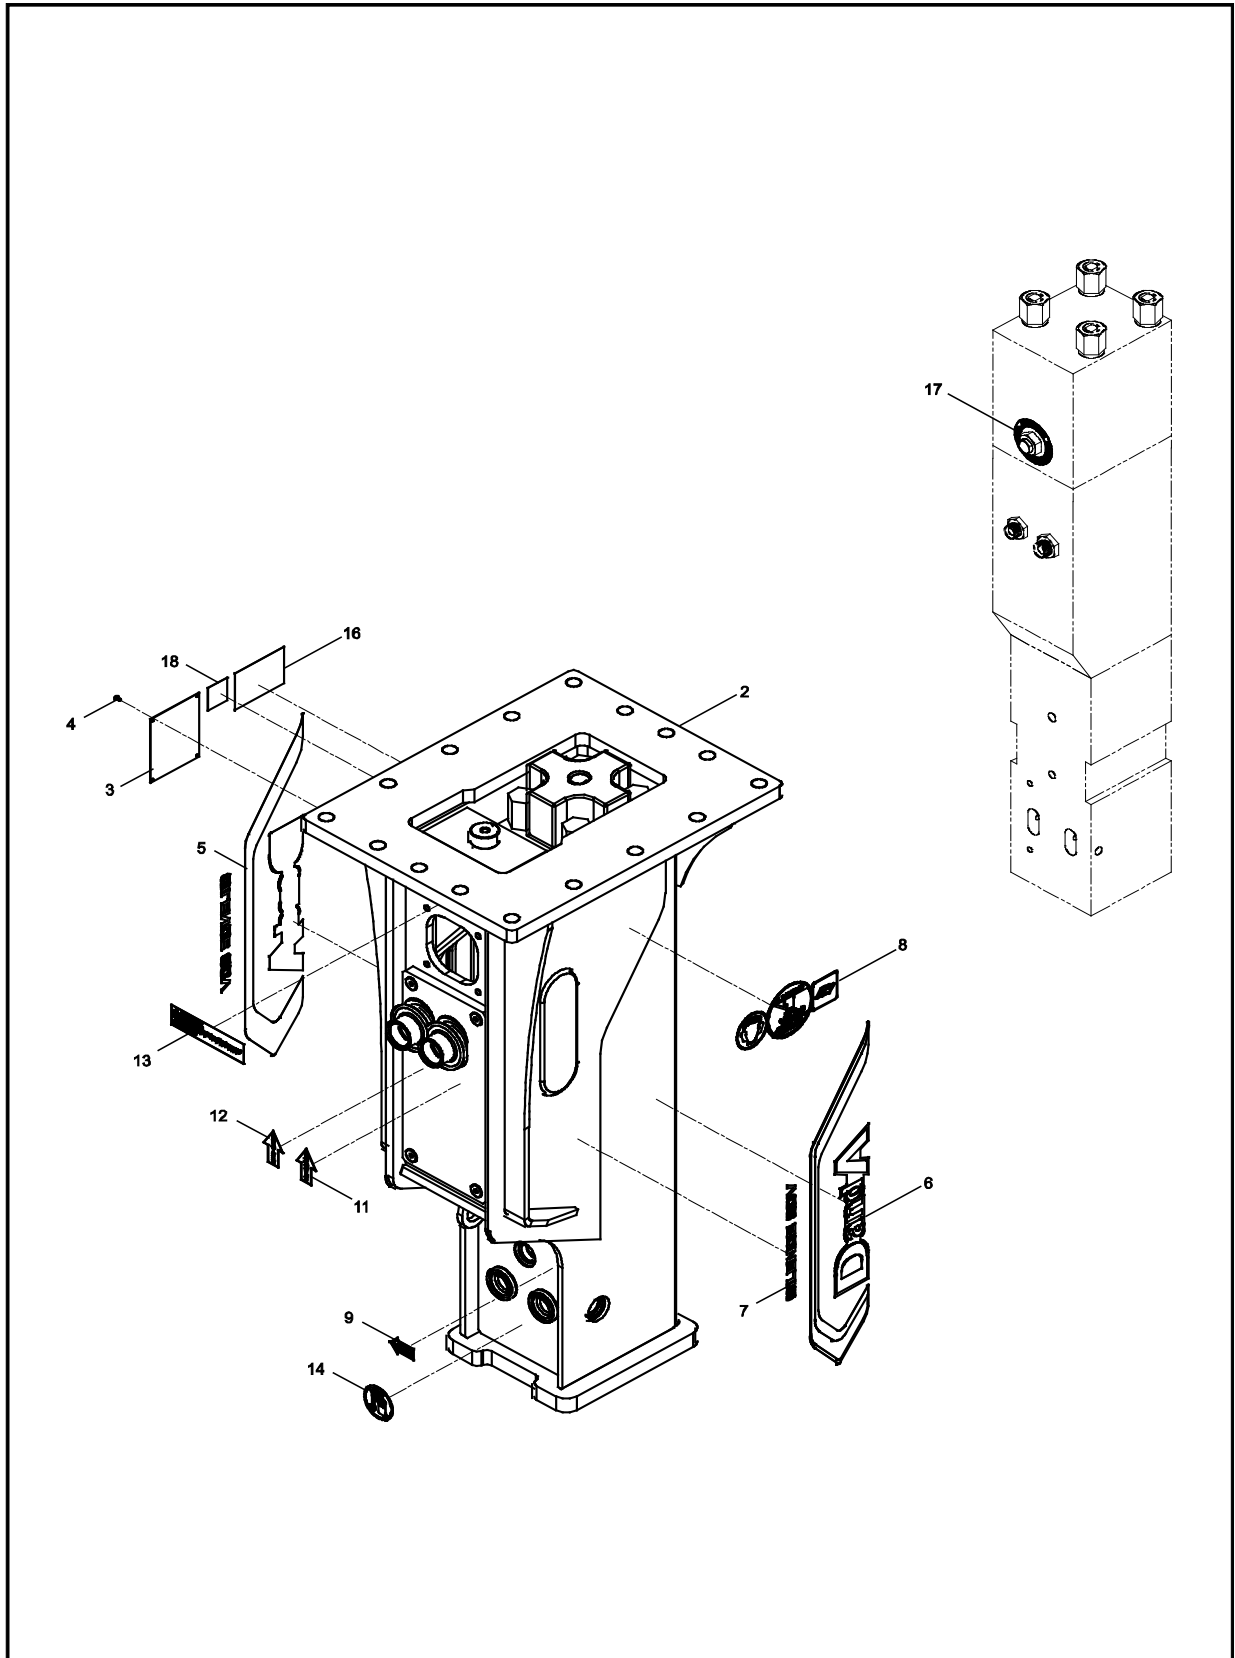


PART LIST - D&A 60V STICKER/NAME PLATE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
3	DandA-NAME-10	NAME PLATE	1	
4	004054-03060	RIVET	4	
5	B040V-DS1250	NAME DECAL (L)	1	
6	B040V-DS2250	NAME DECAL (R)	1	
7	B060V-DS0260	MODEL DECAL	2	
8	B008V-DS000-03	STICKER - DANGER	1	
9	B008V-DS071	STICKER - GREASE	1	
11	B008V-DS0310	STICKER - OUT PORT	1	
12	B008V-DS0320	STICKER - IN PORT	1	
13	B063V-DS000-10	STICKER - WARNING (GAS16)	1	
	B063V-DS000-12	STICKER - WARNING (GAS10)	1	for SKID
14	B63V-DS000-06	STICKER - HOT CAUTION	1	
16	B132V-DS000-15	STICKER - LOOSE BOLT CAUTION	1	
17	B140F-DS0010	STICKER - WARNING DISCHARGE	1	
18	NOISE-11700	STICKER - NOISE	1	

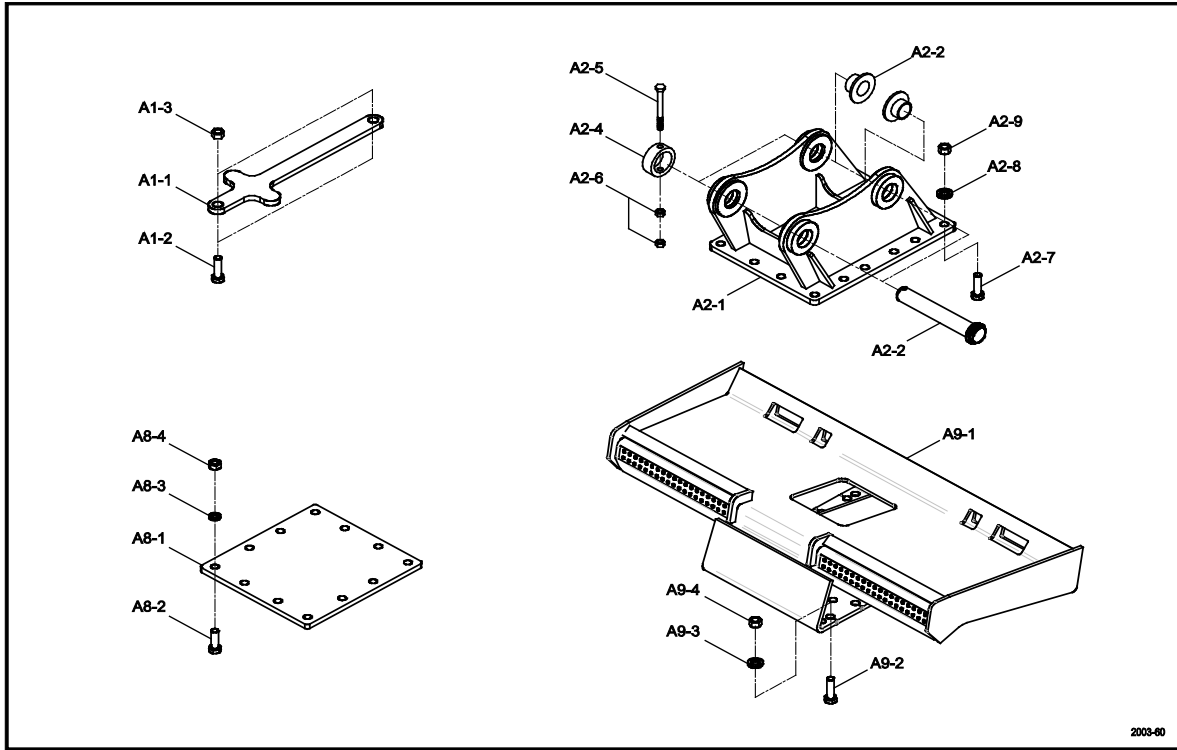




PART LIST - D&A 60V MOUNT CAP

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
A1	B082V-354A0	ADAPTER PLATE SET (W/O MOUNT CAP)	#####	
A1-1	B082V-35401	ADAPTER PLATE	1	
A1-2	002001-18060	HEX BOLT	2	
A1-3	002003-1800N	HEX NUT	2	
A2		MOUNT CAP ASS'Y	#####	TAILOR MADE AS PER ORDER
A2-1		MOUNT CAP WA	1	TAILOR MADE AS PER ORDER
A2-2		BRACKET PIN	2	TAILOR MADE AS PER ORDER
A2-3		BRACKET PIN BUSH	4	TAILOR MADE AS PER ORDER
A2-4		STOP RING	2	TAILOR MADE AS PER ORDER
A2-5		HEX BOLT	2	TAILOR MADE AS PER ORDER
A2-6		HEX NUT	4	TAILOR MADE AS PER ORDER
A2-7	002A01-18065	HEX BOLT	16	
A2-8	002AH8-18000	SPRING WASHER	16	
A2-9	002A11-1800N	NYLON NUT	16	
A8	B082V-354B0	ADAPTER BASE PLATE SET (W/O MOUNT CAP)	#####	
A8-1	B082V-35411	ADAPTER BASE PLATE	1	
A8-2	002A01-18065	HEX BOLT	16	
A8-3	002AH8-18000	SPRING WASHER	16	
A8-4	002A11-1800N	NYLON NUT	16	
A9	B040V-65A00	MOUNT CAP ASS'Y (SKID)	#####	
A9-1	B008V-65000	MOUNT CAP WA	1	
A9-2	002A01-18065	HEX BOLT	12	
A9-3	002AH8-18000	SPRING WASHER	12	
A9-4	002A11-1800N	NYLON NUT	12	

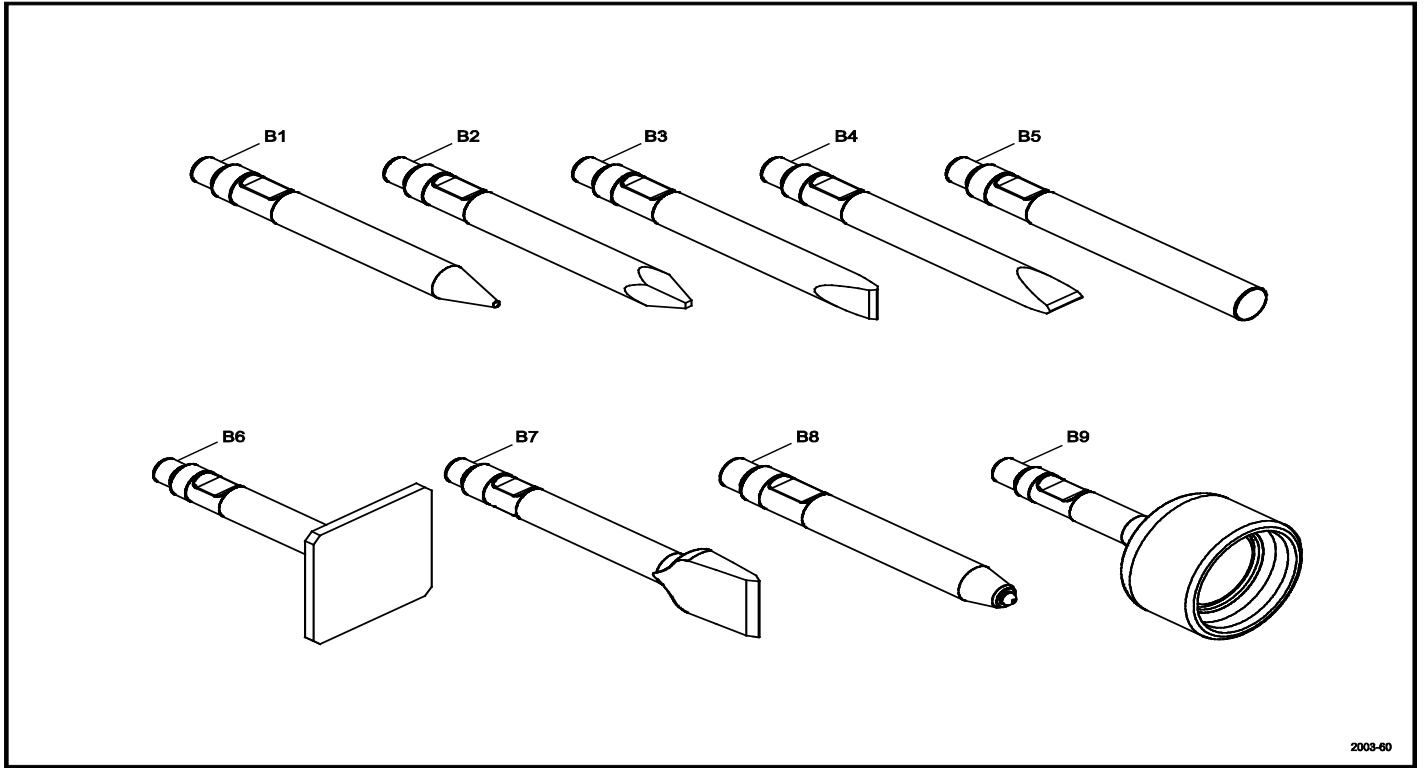


PART LIST - D&A 60V CHISEL (TOOL)

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
B1	B062V-12501	CONICAL POINT (CONICAL MOIL POINT)		
B2	B062V-12511	MOIL POINT (PYRAMID MOIL POINT)		
B3	B062V-12521	CROSS CUT (CHISEL POINT H)		
B4	B062V-12531	IN-LINE (CHISEL POINT V)		
B5	B062V-12541	FLAT END (BLUNT)		
B6	B062V-12550	TAMPING PAD (TAMPING TOOL)		
B7	B062V-12560	ASPHALT CUTTER		
B8		CORE CONICAL POINT (CORE MOIL POINT)		TAILOR MADE AS PER ORDER
B9		ELEPHANT FOOT TOOL (POST DRIVER)		TAILOR MADE AS PER ORDER

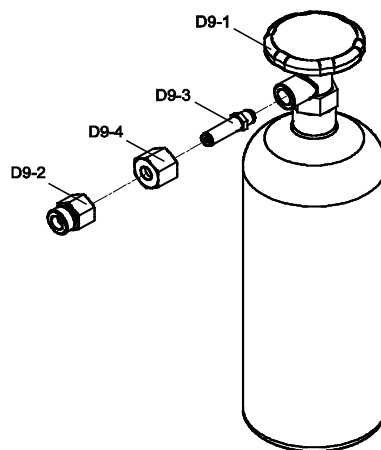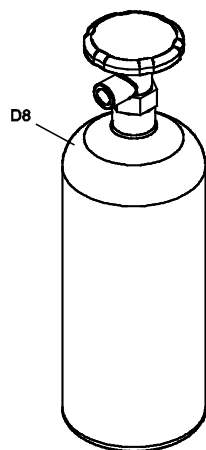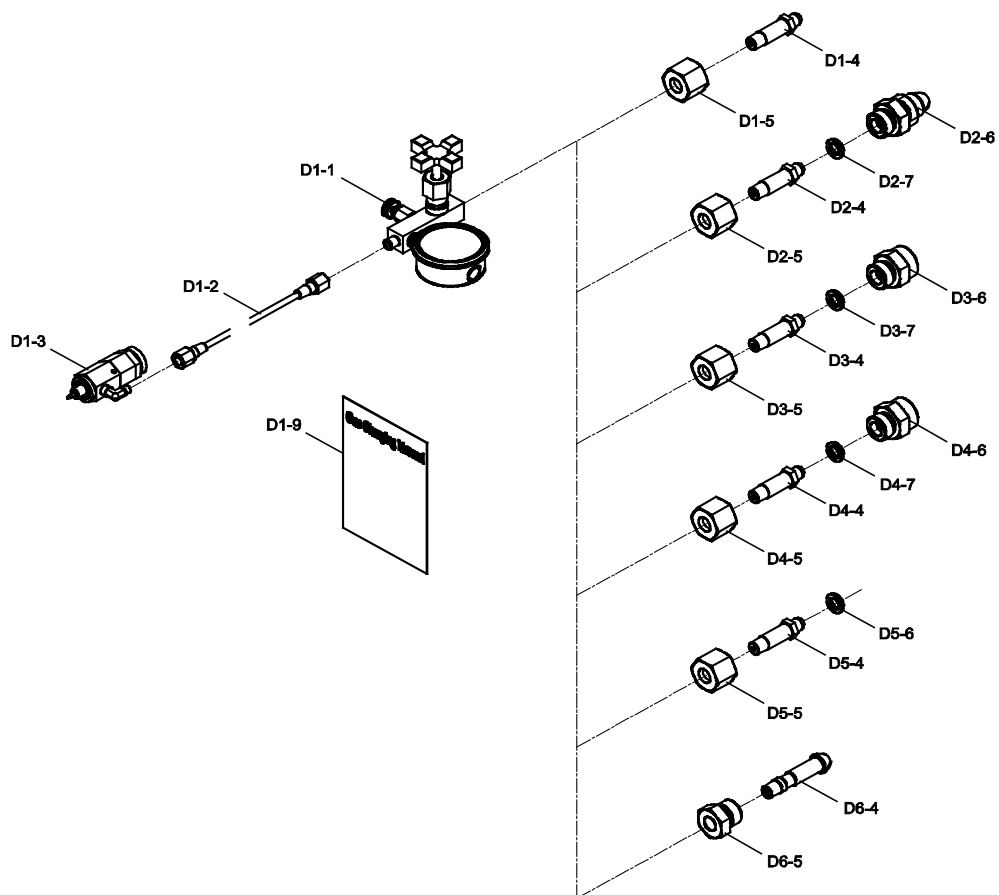


PART LIST - D&A 60V GAS CHARGING

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
D1	BGK01-N2DS1	GAS CHARGING KIT - STANDARD	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D1-4	BGK00-N2430	COUPLING	1	
D1-5	BGK00-N2420	CAP NUT	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D2	BGK01-N2V11	GAS CHARGING KIT - INDIA	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D2-4	BGK00-N34F0	COUPLING	1	
D2-5	BGK00-N3420	CAP NUT	1	
D2-6	BGK00-N3490	GAS CYLINDER ADAPTER	1	
D2-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D3	BGK01-N2VC1	GAS CHARGING KIT - CHINA	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D3-4	BGK00-N34F0	COUPLING	1	
D3-5	BGK00-N3420	CAP NUT	1	
D3-6	BGK00-N34C0	GAS CYLINDER ADAPTER	1	
D3-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D4	BGK01-N2BM1	GAS CHARGING KIT - BRAZIL	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D4-4	BGK00-N34F0	COUPLING	1	
D4-5	BGK00-N3420	CAP NUT	1	
D4-6	BGK00-N34B0	GAS CYLINDER ADAPTER	1	
D4-7	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D5	BGK01-N2GE1	GAS CHARGING KIT - GERMANY	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D5-4	BGK00-N34F0	COUPLING	1	
D5-5	BGK00-N3420	CAP NUT	1	
D5-6	BGK00-N3480	RING	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D6	BGK01-N2A01	GAS CHARGING KIT - NORTH AMERICA	#####	
D1-1	BGK01-N2410	3 WAY VALVE SET	1set(s)	
D1-2	BGK00-N22D0	GAS HOSE	1	
D1-3	BGK00-G220A	GAS ADAPTER	1	
D6-4	BGK00-NALL0	COUPLING	1	
D6-5	BGK00-NCAL1	CAP NUT	1	
D1-9	DBGM010	GAS CHARGING MANUAL	1	
D8	BGK00-B0300L	GAS CYLINDER	1	
D9	BGK01-B0300LS	GAS CYLINDER - INDIA	#####	
D9-1	BGK00-B0300L	GAS CYLINDER	1	
D9-2	BGK00-N3500	GAS CYLINDER ADAPTER	1	
D9-3	BGK00-N3510	COUPLING	1	
D9-4	BGK00-N3520	CAP NUT	1	

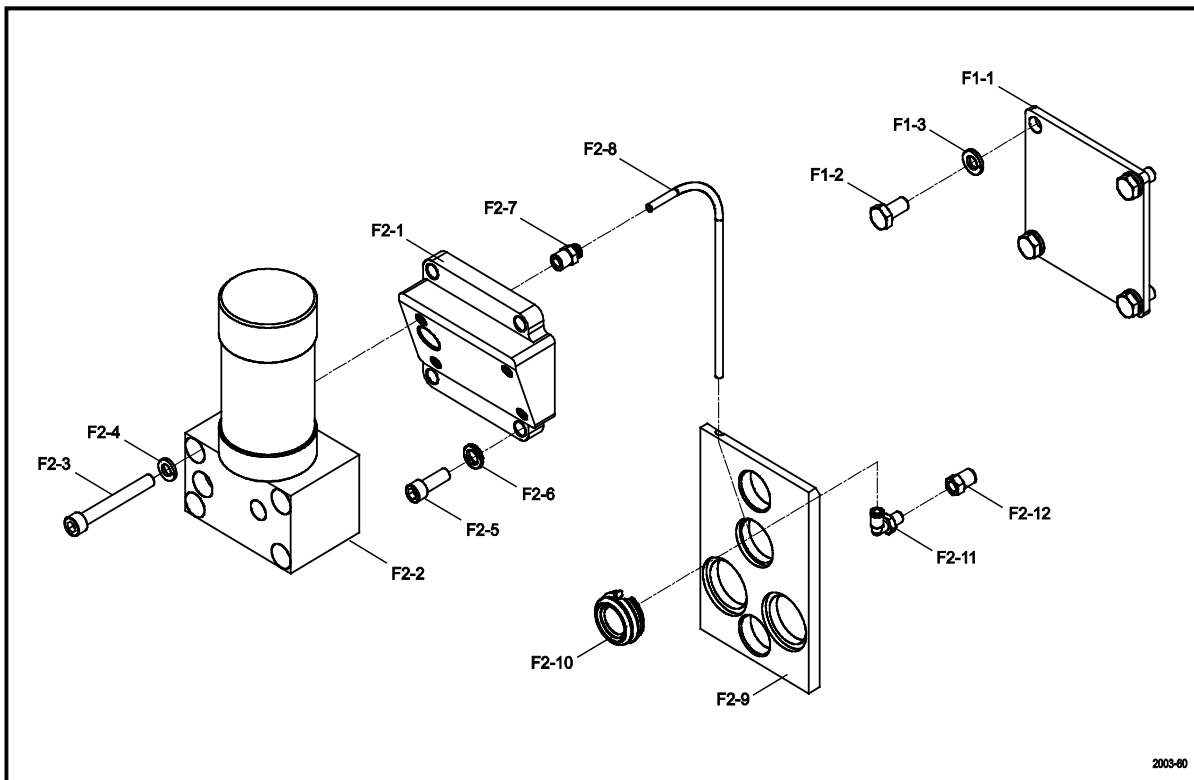


PART LIST - D&A 60V LUBRICATION

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
F1	B008V-2712A	GAS COVER ASS'Y (MANUAL LUBE TYPE)	#####	
F1-1	B008V-27129	GAS COVER	1	
F1-2	002A01-10020	HEX BOLT	4	
F1-3	002AH8-10000	SPRING WASHER	4	
F2	B062V-S2B00300	AUTO LUBE SYSTEM KIT (VIBRATION TYPE)	#####	
F2-1	B062V-28129	AUTO GREASE BASE PLATE	1	
F2-2	S2B00300	AUTO GREASE BODY	1	
F2-3	002A02-10080	SOCKET BOLT	4	
F2-4	002A08-10000	SPRING WASHER	4	
F2-5	002A02-10035	SOCKET BOLT	4	
F2-6	002010-10000	NORD-LOCK WASHER	4	
F2-7	004054-10406	ONE TOUCH FITTING	1	
F2-8	004056-06850	GREASE HOSE	1	
F2-9	B062V-28239	MC PAD (SHELL PAD)	1	
F2-10	B050V-1280G	RUBBER COVER	1	
F2-11	004055-10806	ONE TOUCH ELBOW	1	
F2-12	004028-T20T1	HEX BUSH	1	

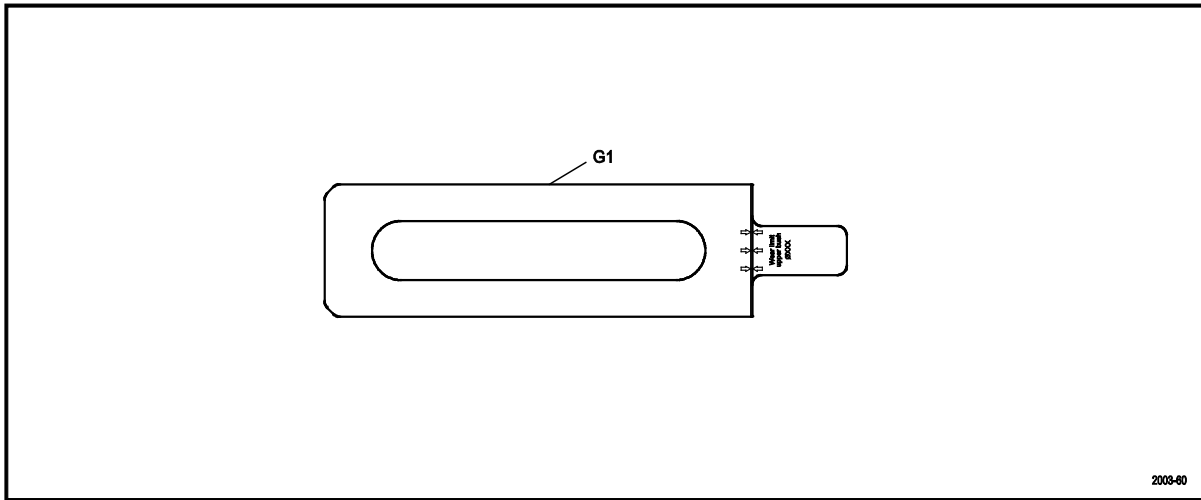


PART LIST - D&A 60V JIG

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
G1	B060B-UBJD0	UPPER BUSH JIG	1	

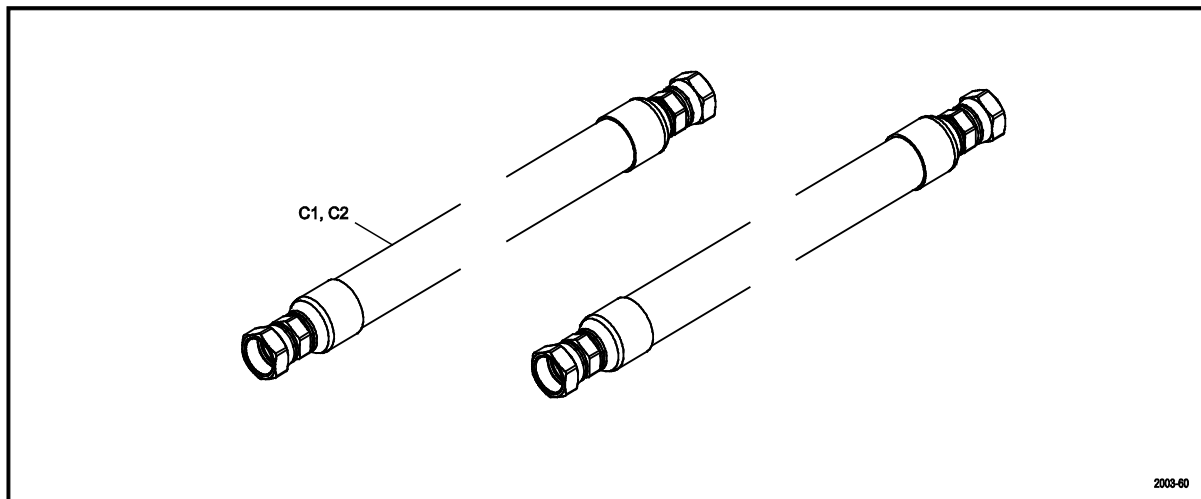


PART LIST - D&A 60V HYD HOSE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
C1	101202-AA190044	HYD HOSE_1900	2	
C2	101202-AA250044	HYD HOSE_2500	2	for SKID

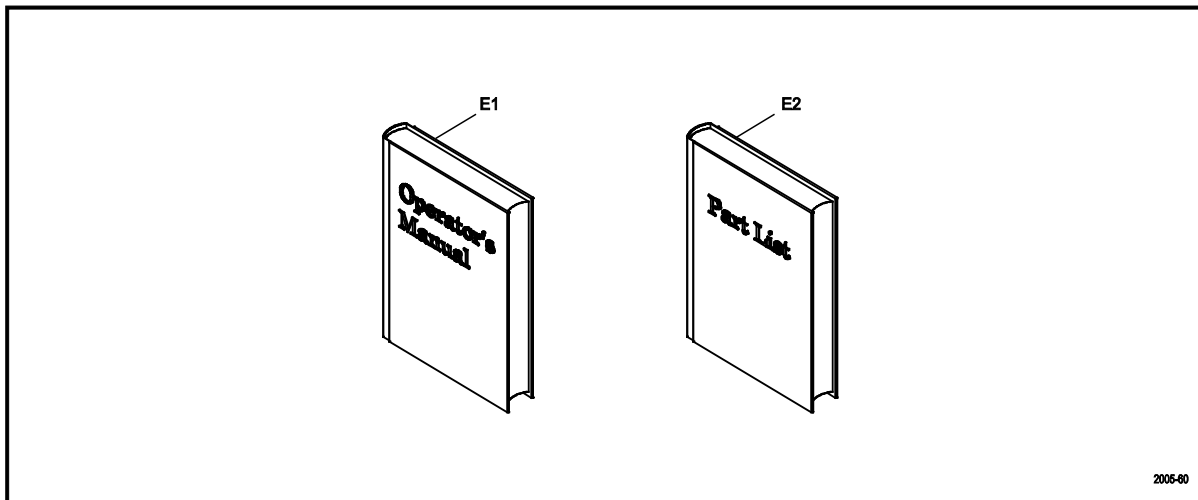

PART LIST - D&A 60V LITERATURE

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
E1	DBOM100	OPERATOR'S MANUAL	1	
E2	DBPM100-065V	PART LIST	1	

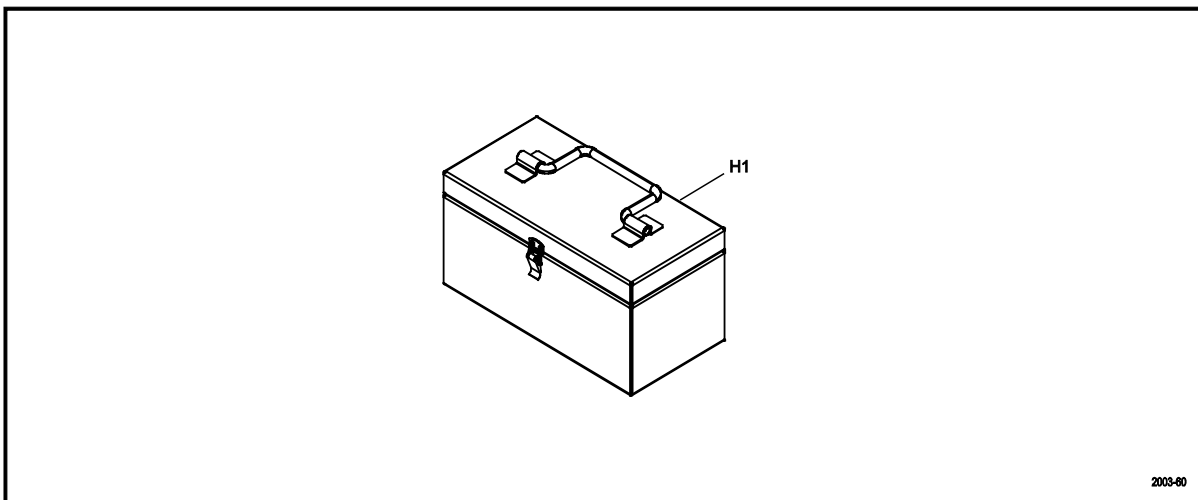

PART LIST - D&A 60V TOOL BOX

NO	PART NO	PART DESCRIPTION	Q'TY	REMARK
H1	B060V-TB001	TOOL BOX	1	



**THIS PAGE
IS INTENTIONALLY
BLANK**



STRIKE*  *FORCE TM
BY PALADIN